



## Instruction Booklet 使用說明




### 24MM KERATIN STRAIGHTENER 24毫米角質蛋白直髮器

VS2540H

### 沙宣24毫米角質蛋白直髮器

#### 開始認識您的直髮器

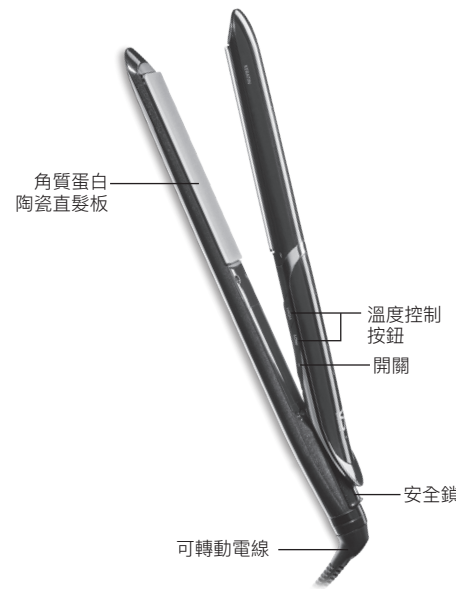

#### 操作指示

本直髮器適合家居使用，適用電壓為220-240伏特交流電。切記只可以交流電（50-60赫茲）操作。

#### 使用說明

- 梳理乾髮並將頭髮分區。
- 按下開關 按鈕以開啟直髮器。
- 本直髮器的自動設置為200°C。開啟後，指示燈會一直閃爍直至達到所設溫度，期間指示燈會保持發亮。
- 要選擇適合您頭髮類型的溫度設置，請按“高(HIGH)”或“低(LOW)”按鈕。
- 取一縷頭髮放在兩個發熱直髮板中間，並將直髮器放到髮根位置。
- 然後壓緊手柄，令直髮板閉合。
- 沿著秀髮慢慢將直髮器從髮根向髮梢滑動。
- 如必要，重複以上步驟。
- 待頭髮冷卻後再梳理。
- 使用後，關閉開關 按鈕，並拔下電器插頭。
- 在使用後進行額外保護，請合緊直髮板並滑動安全鎖讓直髮板閉合。
- 請待直髮器冷卻後再收納。

#### 溫度設置

本產品為不同性質的秀髮提供六段溫度設定，適用於140°C至235°C。

**低溫按鈕：**當按下低溫按鈕時，您可以在140°C，160°C，180°C或200°C的溫度設置之間切換。請繼續按下按鈕直到它到達您想要的溫度。若您想使用高於200°C的溫度，請按高溫按鈕。較低溫度設置適合纖幼、細緻和/或漂染的頭髮。

**高溫按鈕：**高溫按鈕只能在220°C和235°C之間切換。請繼續按下按鈕直到它到達您想要的溫度。若您想使用低於220°C的溫度，請按低溫按鈕。較高溫度設置適合濃厚和/或粗糙的頭髮。建議您在初次使用本產品時選擇較低溫度，之後逐漸提高溫度，直至找到合適您頭髮的溫度設置。

#### 隔熱保護墊

此電器附有隔熱保護墊，可用於使用時和使用後。使用時，如已使用隔熱保護墊，也請勿將直髮器放置於任何對熱力敏感的表面。使用後，請關掉直髮器並拔掉插頭，立刻用隔熱保護墊包裹直髮器，等待完全冷卻後收藏。關掉直髮器並等待完全冷卻期間，請將直髮器和小童保持距離，以策安全，因為直髮器在關機後仍會維持高溫數分鐘。

#### 安全自動關機系統

本產品具有安全自動關機系統，開機超過72分鐘後會自動關機。此時如要繼續使用，可按下“”按鈕即可重新開機。

#### 保養

本直髮器無需特別保養，亦無需用潤滑劑。請避免讓污物或塵埃堵塞器具上的孔。如需清潔機身，請先拔掉電源插頭並待機身降溫，然後用布塊擦拭機身外表。如發生任何異常現象，請立即拔出電源插頭並待機身降溫，然後交給授權沙宣維修中心修理。用戶切勿自行維修本直髮器。

為保持直髮器的最佳表現，請注意下列保養須知：

- 切勿讓尖銳物件接觸板面，或用粗糙物料磨擦板面。
- 切勿與強力化學品一併使用，如電髮水。
- 切勿使用強力清潔劑清潔板面；一般情況下，溫和清潔劑已可輕易清除污漬及殘留的髮型用品。

#### 警告

切勿拉扯、扭曲或過度彎曲電線。切勿將電線纏繞在機身上，否則容易損壞接入機身的可轉動部位，導致電線破裂或短路。如發現直髮器破損、停止或間歇性停止操作，請立即停用。

#### 收存指示

不使用本直髮器時，可待機身降溫後，將其收存於安全、乾燥及遠離兒童的地方。切勿以拉扯電線的方式拔出插頭；切勿將電線纏繞在機身上。要確保電線的接入機身部分垂直，其餘部分自然放置即可。

#### 重要安全指示

當使用電器時，尤其有小童在場，應小心及遵守以下安全指示：

#### 使用前請細閱使用說明

#### 電器應遠離水源

#### 安全預防措施

**警告：**包裝或產品上使用的膠袋可能有危險，請擺放在嬰兒及兒童拿不到的位置。請勿於嬰兒床、睡床、嬰兒車或兒童遊樂園內使用。膠袋的薄層可能會堵塞鼻子及口腔，阻礙呼吸。此膠袋不是玩具。



**警告：**不要在盛水的浴缸、淋浴缸、洗臉盆或其他器皿附近使用本器具。



1. 當電器在浴室使用後，應立即拔除插頭，因為電器接近水會導致危險，即使開關已關掉。為提供額外的安全性保護，建議閣下在提供浴室電源的電路中安置不超過30毫安培(mA)的漏電斷路擊(RCD)；如有疑問，請向負責安裝的電機工程師查詢。
2. 切勿把電器放入或掉進水或其他液體中。
3. 如果電源線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
4. 若電器曾跌落或有任何不妥，請馬上停止使用。
5. 切勿將已接上電源或開啟的電器置之不理。
6. 如若在使用中有任何不妥，請馬上拔去插頭。
7. 請不要使用非本產品提供的任何配件。
8. 每次用完後或清潔前請先拔去插頭。
9. 切勿將電器發熱的部份碰到身體，尤其是眼睛、耳朵、面部和頸部。
10. 本產品不該讓身體、感官或精神能力有缺陷或缺乏使用電器經驗與常識的人（包括兒童）單獨使用，而應由有經驗及常識之監管人監察及指導下使用此產品。小孩子應被監管以保證他們不會將此產品當成玩具。
11. 待電器冷卻之後才收藏。
12. 為避免損壞電源線，收藏時切勿將電源線纏繞在電器上並確保其不被拉扯、扭曲或屈折。

#### 電路說明

總電線的顏色分別根據其性質而定：

藍色代表中線  
啡色代表火線

由於電器的總電線顏色和插頭的電路接頭顏色可能不相符，故如要拆除插頭，必須依照以下重新裝配操作說明：

- 藍色的電線應和電路接頭“N”接駁。
- 啡色的電線應和電路接頭“L”接駁。
- 切勿將以上任何一條電線接駁在電路接頭的地線“E”或 插頭上。

此電器使用十三安培電插頭時，請採用三安培的保險絲。若使用其他電插頭，請採用三安培的保險絲。

#### 兩年保養期限

在您購買日期起兩年內，並在正常情況下，如產品的品質或零件有任何不妥善之處，沙宣顧客服務中心將會為您免費提供維修或換貨服務。如需獲得此保用服務，只需保留正本收據，倘若產品於保養期內有任何問題，可蒞臨您所在地區的顧客服務中心處理。注意：是項保養不包括一切因錯誤使用、不依指示處理產品及意外損毀、

遺失零件及經自行改造的產品。

#### 保用期之後

請致電使用說明中所列出的您所在地區的沙宣顧客服務中心，諮詢維修服務詳情，或是電郵至email\_asia@conair.com，附上您的名字，電話號碼和電郵地址，還有產品不妥善之詳情。

如欲了解更多，請登入



通過此二維碼也可獲取電子說明書

#### VS SASSOON SERVICE CENTRE

Manufacturer: Conair Far East Ltd  
Address: 35/F., Standard Chartered Tower, Millennium City,  
388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong.  
Tel: (852) 2751 4604

#### 沙宣顧客服務中心

製造商：美康雅達東有限公司  
地址：香港九龍觀塘觀塘道388號創紀之城渣打中心35樓  
電話：(852) 2751 4604

www.toolsofsassoon.com

#### SOLE DISTRIBUTED BY: 經銷商:

Philippines 菲律賓  
Rustan Marketing Corporation  
3rd Floor, 403 Midland Building,  
Senator Gil Puyat Ave., Makati City, Philippines  
Tel: (632) 890 9703 Fax: (632) 890 4838

Malaysia 馬來西亞  
Innovest Marketing Sdn. Bhd.  
Lot 2208, Jalan Kusta, Kampung Jaya Industrial Area,  
47000 Sungai Buloh, Selangor D.E., Malaysia  
Tel: 603 6141 3598

Singapore 新加坡  
Massmark International Pte Ltd  
80 Genting Lane #08-01/05  
(\*Drive in through 35 Tannery Road)  
Ruby Industrial Complex, Genting Block  
Singapore 349565  
Tel : 65-6747 1102 Fax : 65-6747 8997

Indonesia 印尼  
PT. Autoaccindo Jaya  
JL.Cideng Barat No.7,  
Jakarta 10140, Indonesia  
Phone: + 6221 6332730  
Fax: + 6221 6322886

Certain trademarks used under license from The Procter & Gamble Company or its affiliates.  
維達沙宣及其有關標誌乃寶潔有限公司擁有，授權予美商美康雅公司及其關係企業使用。

VS2540H

IB-18/403A

### CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT


Date	11/2/2020
Customer	VS-HK
Model No.	VS2540H
Description	IB
Job No.	
Reference No.	IB-18/403A
Revision No.	0
Color	1C+1C(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Ken Xiong/Sofi Yip
Vendor	MILLPLAN
Supplier	

折疊方法  
Folding method:  
12 pages (6 x 2)



## VS SASSOON 24MM KERATIN STRAIGHTENER

### GET TO KNOW YOUR KERATIN STRAIGHTENER

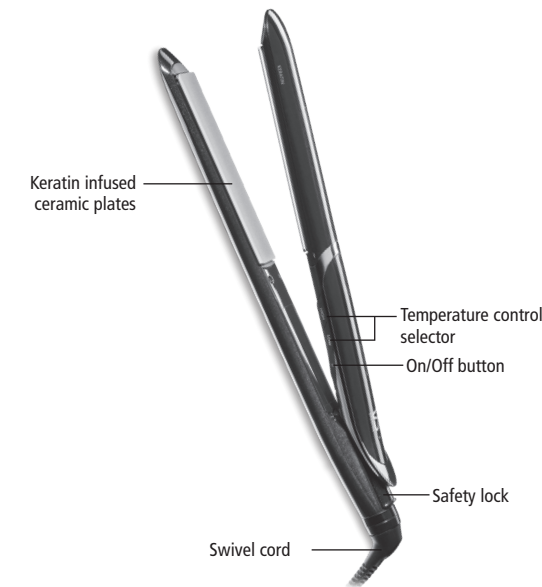

### OPERATING INSTRUCTIONS

This straightening iron is intended for household use. This unit is designed to operate at 220–240 volts AC. Use on Alternating Current (50-60 hertz) only.

### INSTRUCTIONS FOR USE

- Comb through dry hair and divide into sections.
- To turn on the appliance, press the ⏻ button.
- The appliance will automatically set to 200°C and will blink until the temperature has been reached. Once the temperature has been reached, the indicator will remain solid in colour.
- To select a temperature setting suitable for your hair type, press the 'HIGH' or 'LOW' button.
- Separate a section of hair and place between the plates, close to the roots.
- Close the plates together and hold the hair firmly between the plates.
- Slide down the length of hair, from root to tip.
- Repeat as necessary through the remaining sections.
- Allow the hair to cool before combing through.
- After use, press the button marked ⏻ to switch off the appliance

and then unplug from the power point.

- For additional heat protection after use, close the appliance and slide the safety switch to lock the plates together.
- Allow the appliance to fully cool down before storing away.

### HEAT SETTINGS

There are 6 heat settings available to suit all hair types from 140°C to 235°C.

**LOW heat button:-** When pressing the LOW button, you can switch between the lower heat settings of 140°C, 160°C, 180°C or 200°C only. Keep pressing the button until it moves to the temperature you desire. Should you want to use a temperature higher than 200°C, press the HIGH button. The lower heat settings are suitable for enhancing heat protection on fine, delicate or coloured hair.

**HIGH heat button:-** When pressing the HIGH button, you can switch between 220°C and 235°C only. Keep pressing the HIGH button until it moves to the heat setting you desire. Should you want to select a temperature lower than 220°C, press the LOW button. The high heat settings are suitable for thick or coarse hair types. On initial use, start on a lower heat setting and increase temperature until you find a suitable temperature for your hair type.

### HEAT MAT

This appliance comes with a heat mat for use during and after styling. During use do not place the straightener on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the straightener. Immediately wrap the straightener in the heat protection wrap provided and allow to fully cool down. Continue to keep it out of the reach of children as the appliance will remain hot for several minutes.

### AUTO SHUT OFF

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 72 minutes continuously, then it will automatically switch off. To continue using the appliance after this time, simply press the ⏻ button to turn the power on.

### MAINTENANCE

Your straightening iron is virtually maintenance-free. No lubrication is needed. Keep all openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

However, in order to keep the best performance from your straightening iron all the time, please note the following care instructions.

- Do not scratch the surface of the plates with sharp objects or wipe with coarse material.
- Do not use this straightening iron with strong chemicals, like perm lotions.
- Do not clean the plates with strong cleaning agents. In most cases, mild detergent will be able to remove any stains or traces of styling products left on the plates easily.

### CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

### STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

### SAFETY PRECAUTIONS

**WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons

in order to avoid a hazard.

4. Do not use the unit if it has fallen or if it appears to be damaged.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before cleaning it.
9. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
10. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
11. Allow the unit to cool before storing.
12. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.

### WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL  
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter 'N'.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter 'L'.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the ⊕ symbol.

With this appliance, if a 13 amp plug is used a 3 amp fuse should be fitted. If any other type of plug is used a 3 amp fuse must be fitted either in the plug or at the distribution board.

### LIMITED TWO YEAR WARRANTY

This styler can be repaired or replaced free of charge for 2 years from the date of purchase if the styler is defective in workmanship or materials. This warranty is no longer valid in case of alteration or repair by any unauthorised persons. To obtain service under this warranty, please keep the original purchase receipt for warranty

service, and you can bring the styler to our customer service center for repair during the warranty period.

### OUT OF GUARANTEE

Call VS Sassoon Service Centre in your region as listed in this Instruction Booklet for details of repair service. Or email to us at email\_asia@conair.com with your name, contact telephone number and email address and details of the fault.

For more information, please visit



You can also obtain digital instruction manual by QR code.