



Instruction Booklet 使用說明




VS 19MM TOURMALINE CERAMIC STEAM STRAIGHTENER 沙宣19毫米 電氣石陶瓷蒸汽直髮器

VSSS2H

沙宣19毫米電氣石陶瓷蒸汽直髮器

 開始認識您的蒸汽直髮器

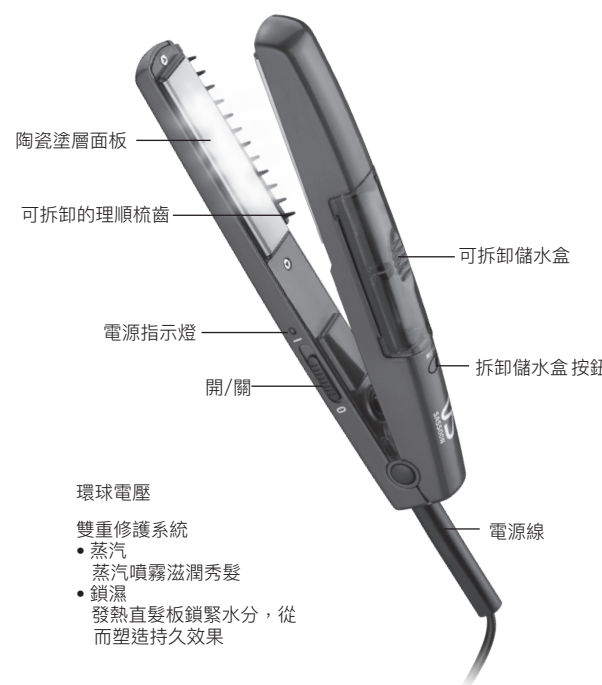

重要：為達到更好的造型效果，請在使用前將蒸汽直髮器通電預熱4-5分鐘。

未經預熱，有可能會在使用過程中有水從發熱面板中滲出。

操作指示

將蒸汽直髮器電線插頭插入100-240伏特家居電源插座，將I/O鍵撥至“I”位置。直髮器會迅速變熱。操作期間，電源指示燈會保持發亮。將I/O鍵撥至“O”位置即可關機，指示燈亦同時會熄滅。切勿在蒸汽直髮器開機後置之不理。

警告：蒸汽直髮器的直髮板會在開機後短短數秒內變得非常灼熱，因此切勿在開機後讓皮膚觸及機身發熱部分。

使用蒸汽直髮器直髮前，請先將秀髮洗干淨並徹底吹干。

環球電壓

本直髮器會自動調校至合適輸入電壓。如需要，請在插座上轉接合適的配接插頭。

注水

警告：切勿在機身灼熱時取下可拆卸儲水盒。待機身降溫後再注水。從機身上取下可拆卸儲水盒，打開橡膠蓋並注入蒸餾水，然後蓋好並將可拆卸儲水盒裝回機身。

警告：使用時，儲水盒有機會掉下來，引起燙傷，請注意。

雙重修護系統及先進技術

電氣石陶瓷 (Tourmaline Ceramic) 則令秀髮角質層變得順滑，保護其免受熱力傷害。雙重修護系統首先會向頭髮噴灑蒸汽，然後以發熱直髮板鎖緊水分，從而塑造出順滑、有光澤、挺直的持久造型！蒸汽直髮器直髮板順滑易拉，並具備不粘表層，保持清潔。每次使用後，只需以濕布抹去殘留物質便可。採用電氣石陶瓷技術及雙重修護系統，讓你塑造出媲美專業髮型屋的持久直髮造型。

理順梳齒

理順梳齒可將髮結解開、理順蓬亂不堪的頭髮！

直髮及造型

使用蒸汽直髮器直髮之前，請先洗淨秀髮並吹干。塗抹少量造型劑後再吹干秀髮可獲得更好的效果。執起約4釐米寬及不超過1釐米厚的髮束。確保髮束沒有打結。將髮束放置於兩面熱直髮板之間，直髮板貼近髮根，然後緊握手柄壓緊髮束。保持握緊姿勢，將直髮器慢慢向髮尾方向拉，到達髮尾後，鬆開手柄，讓髮束自然滑落。

如何使用蒸汽直髮器的蒸汽功能拉直頭髮

 
- 為達到更好的造型效果，請在使用前將蒸汽直髮器通電預熱4-5分鐘。未經預熱，有可能會在使用過程中有水從發熱面板中滲出。
- 首次使用蒸汽功能或不用一段時間後，在開啟此功能時，請將開合手柄反復操作三次，以令水泵更好運作。
- 梳齒可在造型期間先簡易理順頭髮。(如卸下梳齒，只需在面板旁輕輕順著凹槽推出梳齒即可。)
- 從髮根開始拉直頭髮，直至髮尾。

電氣石陶瓷科技

電氣石陶瓷科技是將壓碎了的電氣晶石，注入陶瓷塗層之中的新科技。電氣石釋出負離子，大大縮短干髮時間及減少靜電的形成。陶瓷有助熱力快捷均勻地分布，減少熱力對秀髮的傷害，溫和干髮，效果卓越，提供更快健康健康的干髮造型，更亮麗貼服的效果。

二合一儲存袋及隔熱墊

折疊扣緊可安全收存仍然發熱的直髮器。

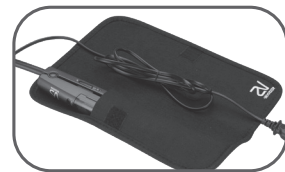

打開墊子，可防止熱力損壞檯面。



保養

您的蒸汽直髮器無需特別保養，無需添加潤滑油。如需清潔機身，請先拔掉電源插頭並待機身降溫，然後用布塊擦拭機身外表。若有任何異常情況，讓電器冷卻並交回沙宣顧客服務中心維修。切勿自行修理電器。

警告

切勿拉扯、扭曲或過度彎曲電源軟線。切勿將電源軟線纏繞在機身上，導致電源軟線破裂或短路。請經常檢查電源軟線有否破損，如發現破損、停止或間歇性停止操作，請立即停用。並將直髮器送到沙宣顧客服務中心檢修，用戶切勿嘗試自行修理。

收存

不使用時，請將電器斷開電源，將其收存於安全、干燥、兒童接觸不到的地方。切勿以拉扯電源軟線的方式拔出插頭；要確保電源軟線的接入機身部分垂直，其餘部分自然放置即可。

重要安全指示

當使用電器時，尤其有兒童在場，應小心及遵守以下安全指示：

使用前請細閱使用說明

電器應遠離水源

安全預防措施

警告：請小心包裝或產品上使用的膠袋，請擺放在遠離兒童的位置。

請不要在嬰兒床、睡床、嬰兒車或兒童玩耍區內使用，因為膠袋的薄層有可能會堵塞鼻子及口腔，阻礙呼吸。此膠袋不是玩具，敬請注意。

警告：不要在盛水的浴缸、淋浴、洗臉盆或其它器皿附近使用本器具。

- 當電器在浴室使用後，應立即拔掉插頭，因為電器接近水會導致危險，即使開關已關掉。為提供額外的安全性保護，建議閣下在提供浴室電源的電路中安置不超過30毫安培(mA)的漏電斷路掣(RCD)；如有疑問，請向負責安裝的電機工程師查詢。
- 切勿把電器放入或掉進水或其它液體中。
- 如果電源軟線損壞，為了避免危險，必須由制造商、其維修部或類似部門的專業人員更換。
- 若電器曾跌落地或有任何不妥，請馬上停止使用。
- 切勿將已接上電源或開啟的電器置之不理。
- 如若在使用中有任何不妥，請馬上拔出插頭。
- 請不要使用非本產品提供的任何配件。
- 每次用完後或清潔前請先拔出插頭。
- 切勿將電器發熱的部份碰到身體，尤其是眼睛、耳朵、面部和頸部。
- 在無成人監管的情況下，不建議兒童或殘疾人士獨自使用此電器。禁止兒童把此電器當作玩具把玩。
- 待電器冷卻之後才收藏。
- 為避免損壞電源軟線，收藏時切勿將電源軟線纏繞在電器上並確保其不被拉扯、扭曲或屈折。
- 使用前請先閱讀本使用說明中有關環球電壓的資料。
- 請勿配合變壓器使用。

電路說明

總電線的顏色根據其性質而定：

藍色代表中線
啡色代表火線

由於電器的總電線顏色和插頭的電路接頭顏色可能不相符，故如要拆除插頭必須依照以下重新裝配操作說明：

- 藍色的電線應和電路接頭“N”接駁。
- 啡色的電線應和電路接頭“L”接駁。
- 切勿將以上任何一條電線駁在電路接頭的地線“E”或 ⊕ 插頭上。

此電器使用十三安培電插頭時，請採用三安培的保險絲。若使用其他電插頭，請採用三安培保險絲。

兩年保養期限

在您購買日期起兩年內，並在正常情況下，如產品的品質或零件有任何不妥善之處，沙宣顧客服務中心將會為您免費提供維修或換貨服務。如需獲得此保用服務，只需保留正本收據，倘若產品於保用期內有任何問題，可蒞臨您所在地區的顧客服務中心處理。注意：是項保養不包括一切因錯誤使用、不依指示處理產品及意外損毀、遺失零件及經自行改造的產品。

保用期之後

請致電使用說明中所列出的您所在地區的沙宣顧客服務中心，查詢維修服務詳情，或是電郵至email_asia@conair.com，附上您的名字，電話號碼和電郵地址，還有產品不妥善之詳情。

如欲了解更多，請登入



通過此二維碼也可獲取電子說明書

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	04/7/2021
Customer	VS-HK
Model No.	VSSS2H
Description	IB
Job No.	
Reference No.	IB-11/050B
Revision No.	3
Color	1C+1C(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Ken Xiong
Vendor	MILLPLAN
Supplier	

VS SASSOON SERVICE CENTRE

Manufacturer: Continental Conair Limited
Address: 35/F., Standard Chartered Tower, Millennium City,
388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong.
Tel: (852) 2751 4604

沙宣顧客服務中心

製造商：美康雅有限公司
地址：香港九龍觀塘觀塘道388號創紀之城渣打中心35樓
電話：(852) 2751 4604

www.toolsofsassoon.com

DISTRIBUTED BY:

經銷商:

Philippines 菲律賓
Rustan Marketing Corporation
3rd Floor, 403 Midland Building,
Senator Gil Puyat Ave., Makati City, Philippines
Tel: (632) 890 9703 Fax: (632) 890 4838

Malaysia 馬來西亞
Innovest Marketing Sdn. Bhd.
Lot 2208, Jalan Kusta, Kampung Jaya Industrial Area,
47000 Sungai Buloh, Selangor D.E., Malaysia
Tel: 603 6141 3598

Singapore 新加坡
Massmark International Pte Ltd
80 Genting Lane #08-01/05
(*Drive in through 35 Tannery Road)
Ruby Industrial Complex, Genting Block
Singapore 349565
Tel: 65-6747 1102 Fax: 65-6747 8997

Indonesia 印尼
PT. Autoaccindo Jaya
JL.Cideng Barat No.7,
Jakarta 10140, Indonesia
Phone: + 6221 6332730
Fax: + 6221 6322886

Certain trademarks used under license from The Procter & Gamble Company or its affiliates.
維達沙宣及其有關標誌乃寶潔有限公司擁有，授權予美商美康雅公司及其關係企業使用。

VSSS2H

 
IB-17/012B

折疊方法
Folding method:
12 pages (6 x 2)



VS SASSOON 19MM TOURMALINE CERAMIC STEAM STRAIGHTENER

GET TO KNOW YOUR STRAIGHTENER

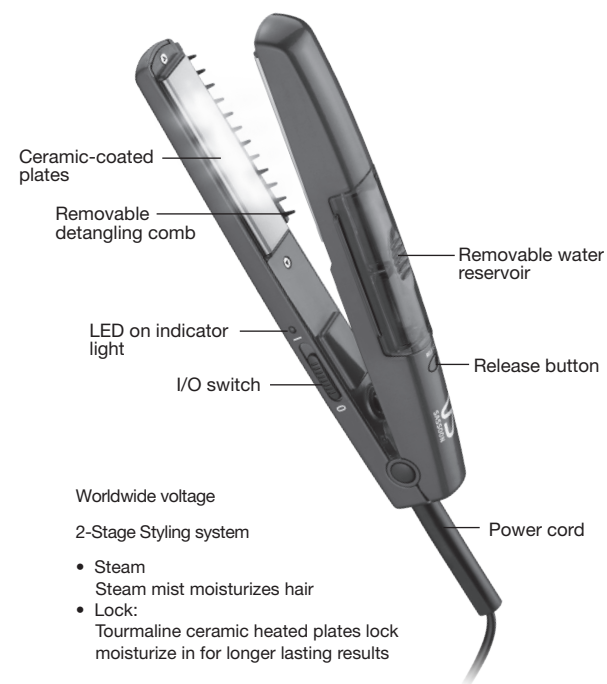

IMPORTANT : Always preheat your straightener before use for approx. 4-5 minutes for best results.

Failure to preheat the straightener may result in water leaking onto the plates during use.

OPERATING INSTRUCTIONS

Plug the straightener cord into any household outlet (100–240V). Slide the “I/O” switch to “I” position. The straightener will heat up very quickly. The power indicator light will remain on when in operation. To turn off, slide switch to “O” position (light will go off). Never leave your straightener on and unattended.

WARNING: The straightener’s plates will get very hot within a few seconds and should not be placed in contact with the skin after the straightener has been turned on.

Hair should be clean and completely dried before using any straightener.

WORLDWIDE VOLTAGE

This straightener will automatically adjust to the proper voltage.

Use an adapter plug with correct configuration, prior to use in outlet.

TO FILL WATER RESERVOIR

WARNING: Never remove the removable water reservoir when hot. Allow to cool before filling. Remove reservoir from unit. Open rubber reservoir cap and fill with distilled water. Replace rubber cap and snap back onto unit.

WARNING:

When using this appliance, the water reservoir is possible to come out of the appliance to cause burn, please watch out!

2-STAGE STEAM & LOCK ADVANCED TECHNOLOGY

Tourmaline Ceramic™ smoothes hair’s cuticle layer to protect it from heat damage. The 2-step styling system first infuses hair with conditioning steam, and then locks in all that healthy moisture with heated plates. The results are sensational: silky, shinier, pin-straight styles that last!

Keeping your straightener’s easy-glide plates clean is effortless, because of its nonstick surface. Simply wipe plates with a damp cloth after each use to remove any product buildup. The advanced Tourmaline Ceramic technology and our 2-stage styling system lets you achieve longer lasting salon-straight looks, every time you style!

REMOVABLE DETANGLING COMBS

The removable detangling combs separate tangles and tame even the most unruly frizz!

TO STRAIGHTEN AND STYLE HAIR

Hair should be clean and dry before using this appliance. For best results, use a light styling product prior to blow-drying. To get started, pick up a section of hair that is 4cm wide and not more than 1cm thick. Make sure it is free of tangles. Place the hair section between the two hot plates, close to the scalp, trapping the hair by firmly squeeze-ing the handles together. Maintaining a firm grip, slowly slide the straightener down hair section toward the end. When you reach the end of the hair section, release your grip on the handles and allow the hair to gently slide out.

How to use your straightener with Steam

 
1. Always preheat your straightener for approx. 4-5 minutes before use. Water may leak onto plates if the straightener has not been preheated.
2. On first use with the steam, or if the unit has not been used for a while, start up the steam function by closing and opening the unit 3 times (a pumping action).
3. The detangling comb will allow hair to spread evenly between the teeth of the comb to untangle your hair with ease. (NB. To remove the detangling comb, simply slide it off the unit)
4. Straighten your hair from root to tip.

TOURMALINE CERAMIC TECHNOLOGY

The Tourmaline Ceramic Technology features crushed tourmaline gem stone crystals infused with ceramic. Tourmaline emits negative ions which dramatically reduce drying time and static electricity. Ceramic emit far infrared heat providing a gentle, even heat that is less damaging. The results are unsurpassed; fater, healthier drying with shiny, smooth results.

2-In-1 Storage Pouch and MAT for compact storage

Fold and snap closed to store hot styling straightener safely.

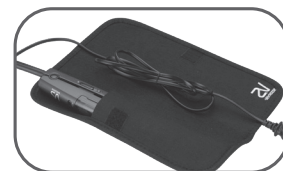

Open mat to protect counters from heat while styling



USER MAINTENANCE

Your steam straightener is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to VS Sassoon service center. No repairs should be attempted by the consumer.

CAUTION

Never allow the power supply cord to be pulled, twisted, or severely bent. causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

- **WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children’s beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not use the unit if it has fallen or if it appears to be damaged.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before cleaning it.
9. Avoid any contact between the unit’s hot surfaces and your skin, in particular, your ears, eyes, face and neck.
10. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
11. Allow the unit to cool before storing.
12. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
13. Before plugging in, read the information about worldwide voltage contained in the operating instructions section of this manual.
14. Do not use with a voltage converter.

WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter ‘N’.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter ‘L’.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the ⊕ symbol.

With this appliance, if a 13 amp plug is used a 3 amp fuse should be fitted. If any other type of plug is used a 3 amp fuse must be fitted either in the plug or at the distribution board.

LIMITED TWO YEAR WARRANTY

This styler can be repaired or replaced free of charge for 2 years from the date of purchase if the styler is defective in workmanship or materials. This warranty is no longer valid in case of alteration or repair by any unauthorised persons. To obtain service under this warranty, please keep the original purchase receipt for warranty service, and you can bring the styler to our customer service center for repair during the warranty period.

OUT OF GUARANTEE

Call VS Sassoon Service Centre in your region as listed in this Instruction Booklet for details of repair service. Or email to us at email_asia@conair.com with your name, contact telephone number and email address and details of the fault.

For more information, please visit



You can also obtain digital instruction manual by QR code.